


Vertical battens for use with horizontal cladding; additional batten at vertical details

*Example layout (position of additional battening can vary)*

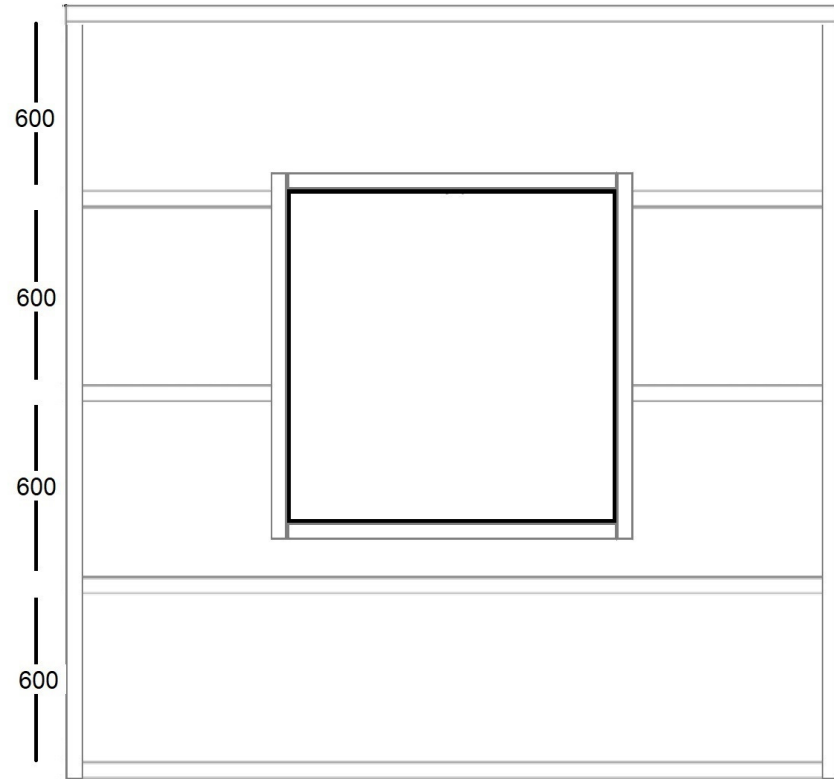

Horizontal battens for use with vertical cladding

*Example layout*

**Note:** while the structural batten does not depend upon being continuously supported by framing, batten fixings to framing need to be at maximum 600mm centres. Where vertical battens are installed where there is no stud, horizontal framing members must be present to provide such fixings.



Structural Cavity Batten Layout for fixing cladding at 600mm centres - applicable up to 4.52 kPa